



Notice d'installation

(Installation instructions / Instrucciones de instalación / Anleitung zur Installation /
Istruzioni per l'installazione / Installatie-instructies)

Chariot remorque de jardin grillagé

(Grill garden trailer/ Remolque parrilla para jardín/ Gartenanhängerwagen mit Drahtgitter/
Rimorchio da giardino con grill/ Grill tuintrailer)







Réf 15360/ TC1840AA



Importé par Provence Outillage www.werkapro.fr
420, route de Robion 84300 Les Taillades France
Tél : 04 90 78 09 61 (Lundi au Vendredi 9 à 17 heures)



Outils nécessaires et matériel fourni/ Tools required et hardware supplied/ Herramientas necesarias y tornillería suministrada/ Erforderliches Werkzeug und mitgelieferte Hardware/ Attrezzi necessari e ferramenta in dotazione/ Vereist gereedschap en meegeleverde hardware

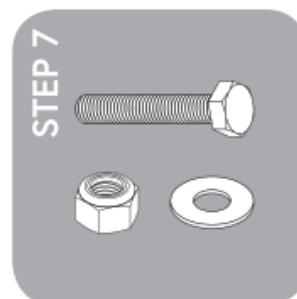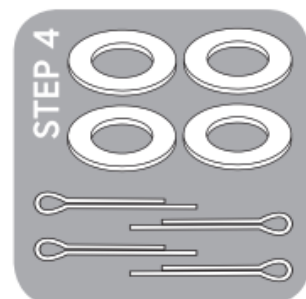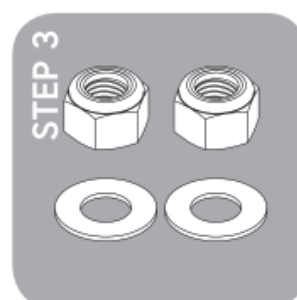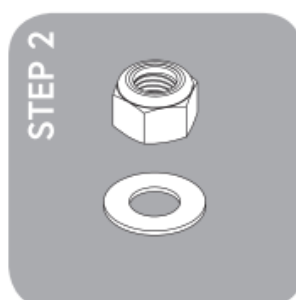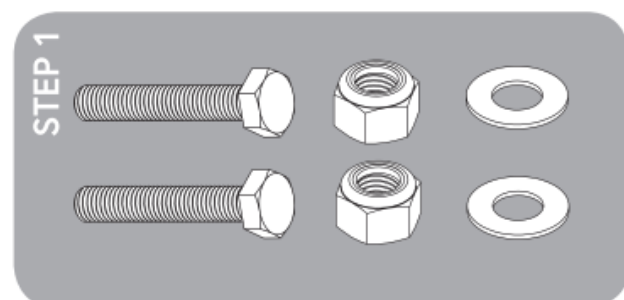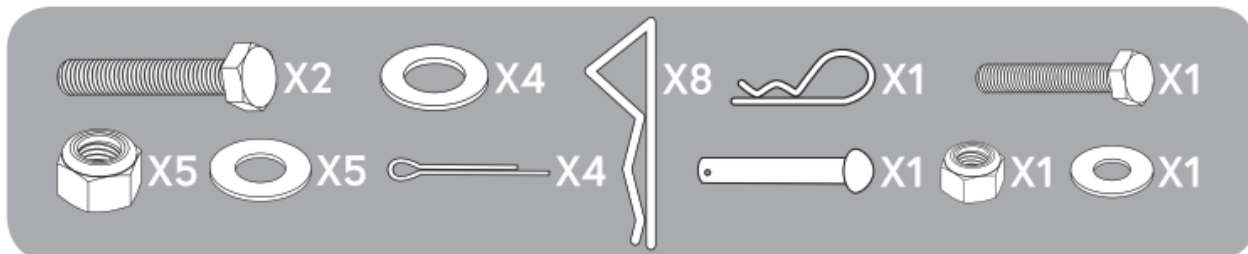

Assemblage de l'essieu avant/ Front axle assembly/ Montaje del eje delantero/ Montage der Vorderachse/ Assemblaggio dell'assale anteriore/ Montage vooras



Essieu avant au châssis/ Front axle to chassis/ Eje delantero al chasis/ Vorderachse am Fahrgestell/
Asse anteriore al telaio/ Vooras aan chassis

2



X1



X1



Essieu arrière au châssis/ Rear axle to chassis/ Eje trasero al chasis/ Hinterachse am Fahrgestell/Asse
posteriore al telaio/ Achteras aan chassis



3



X2



X2

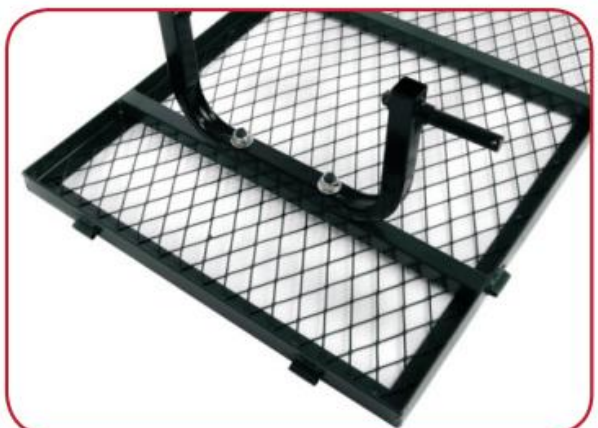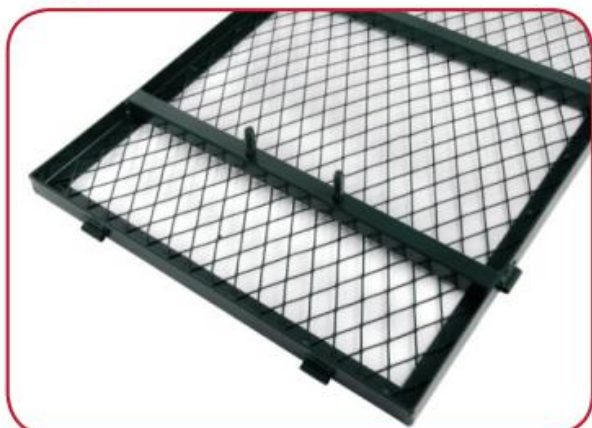


Assemblage des roues/ Wheel assembly/ Montaje de la rueda/ Montage der Räder/ Gruppo ruota/
Montage wiel

4



X4

X4

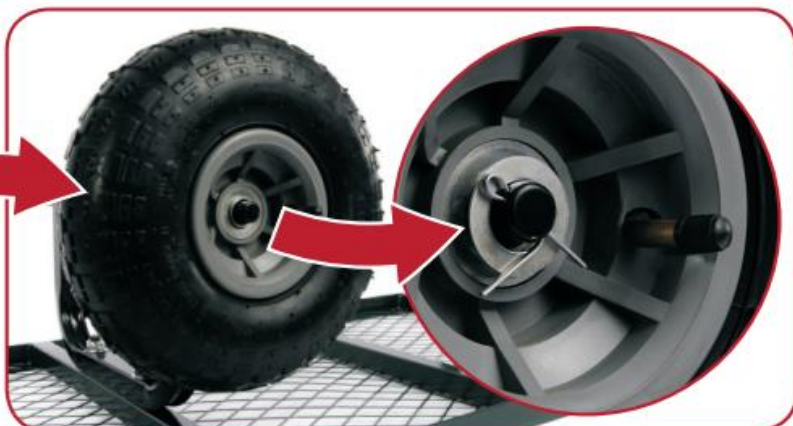

Fixation de la ridelle/ Drop side attachment/ Fijación lateral/ Befestigung an der Bordwand/Fissaggio del lato di caduta/ Bevestiging zijkant



Poignée de la crémaillère de direction/ Handle to steering rack/ Maneta a cremallera/ Griff zur Lenkstange/ Maniglia alla cremagliera dello sterzo/ Handgreep aan stuurhuis

